

How to Update the MW-41BT via USB

1. Format a clean USB thumb drive to FAT32 and copy the firmware file to the thumb drive.
2. The file should be named as:
 “fw5000.upd”
3. Connect the MW-41BT to the power supply and turn on. The device will initialize for a few sec and will produce a beep when ready.
4. Switch the input mode to “USB” by pushing the input button.
5. Insert the USB prepared earlier.
6. The device will automatically read the file in the USB drive and will initiate the USB firmware flash. This will be indicated by the Bluetooth and USB LED lighting simultaneously for approximately 5-10 seconds. DO NOT UNPUG THE USB DURING THIS STAGE.
7. Both LED lights will turn off once the update is finished. Please remove the USB and power cycle the device. Your upgrade has finished.